

B0332 Out Air Tmp Sensor Short to Grnd
 B0333 Out Air Tmp Sensor Open
 B0337 Inside Air Tmp Sensor Short to GND
 B0338 Inside Air Tmp Sensor Open
 B0348 Sunload Tmp Sensor Open
 B0361 Left Act Feedback Short to GND
 B0363 Left Act Feedback Open
 B0365 Right Act Feedback Short to GND
 B0367 Right Act Feedback Open
 B0432 Rear Defogger Relay Circ
 B0433 Rear Defogger Relay Circ
 B0441 Left Act Out of Range
 B0446 Right Act Out of Range
 B0502 RH DRL Relay Circ
 B0503 RH DRL Relay Circ
 B0507 LH DRL Relay Circ
 B0508 LH DRL Relay Circ
 B0516 Speedo Circ Malfunction
 B0521 Tachometer Circ Malfunction
 B0605 BCM Internal Memory Malfunction
 B0605 Receiver Internal Memory Malfunction
 B0844 BCM Temporarily Inhibit ABS
 B0846 +5 Volt Reference Out of Range
 B0851 Battery 1 Out of Range
 B0856 Battery 2 Out of Range
 B1015 Pass Deploy. Loop Resistance Hi
 B1016 Pass Deployment Loop Resistance Lo
 B1017 Pass Deployment Loop Open
 B1018 Pass Deployment Loop Short to GND
 B1019 Pass Deploy. Loop Short to Volt
 B1021 Driver Deployment Loop Resistance Hi
 B1022 Driver Deployment Loop Resistance Lo
 B1024 Driver Deployment Loop Short to Grnd
 B1025 Driver Deployment Loop Short to Volt
 B1026 Driver Deployment Loop Open
 B1035 Discr. Sensor Closed or Short to GND
 B1036 Discr. Sensor Open or Short to Volt
 B1051 Deployment Commanded
 B1053 Deployment Commanded w/Loop Malfunction
 B1061 Lamp Circ Failure
 B1071 Internal SDM Failure
 B1512 DIC Switch 1 Signal Short to Grnd
 B1517 DIC Switch 2 Signal Short to Grnd
 B1522 DIC Switch 3 Signal Short to Grnd
 B1527 DIC Switch 4 Signal Short to Grnd
 B1532 DIC Switch 5 Signal Short to Grnd
 B1537 DIC Switch 6 Signal Short to Grnd
 B1542 Oil Tmp Circ Short to Grnd
 B1543 Oil Tmp Circ Open
 B2002 Fore/Aft Seat Motor Open or Short to GND
 B2007 Front Vert. Seat Motor Open or Shorted
 B2012 Rear Vert. Seat Motor Open or Shorted
 B2172 Seat Front Up Switch Shorted to Grnd
 B2177 Seat Front Down Switch Shorted to Grnd
 B2182 Seat Rear Up Switch Shorted to Grnd
 B2187 Seat Rear Down Switch Shorted to Grnd
 B2192 Seat Forward Switch Shorted to Grnd
 B2197 Seat Reverse Switch Shorted to Grnd
 B2202 Left Window Up Switch Circ
 B2203 Right Window Up Switch Circ
 B2204 Left Window Down Switch Circ
 B2205 Right Window Down Switch Circ
 B2206 Right Window Up Switch Circ
 B2208 Right Window Down Switch Circ
 B2222 LT Mirror Select Switch Circ
 B2224 RT Mirror Select Switch Circ
 B2226 Mirror Right Switch Circ
 B2228 Mirror Left Switch Circ
 B2232 Mirror Up Switch Circ
 B2234 Mirror Down Switch Circ
 B2236 Left Door Lock Switch Circ
 B2237 Right Door Lock Switch Circ
 B2238 Left Door Unlock Switch Circ
 B2239 Right Door Unlock Switch Circ
 B2242 Memory 1 Switch Circ
 B2244 Memory 2 Switch Circ
 B2252 Key Cylinder Switch Circ
 B2253 Key Cylinder Switch Circ
 B2262 Horizontal Pos Sensor Circ
 B2263 Horizontal Pos Sensor Circ
 B2264 Vertical Pos Sensor Circ
 B2265 Vertical Pos Sensor Circ
 B2272 Left Mirror Motor Circ
 B2273 Right Mirror Motor Circ
 B2274 Window Motor Circ
 B2275 Window Motor Circ
 B2276 Door Lock Motor/Mirror Heater Circ
 B2277 Door Lock Motor/Mirror Heater Circ
 B2282 Battery #1 Circ
 B2283 Battery #1 Circ
 B2284 Battery #2 Circ
 B2285 Battery #2 Circ
 B2286 LH Mirror Supply Circ
 B2287 RH Mirror Supply Circ
 B2403 Front Fog Lamp Switch Circ
 B2408 Rear Fog Lamp Switch Circ
 B2482 Backup Lamp Relay Circ
 B2483 Backup Lamp Relay Circ
 B2527 Horn Relay Circ
 B2528 Horn Relay Circ
 B2573 Hatch Release Switch Circ
 B2578 Right Front Turn Signal Monitor Circ
 B2583 Left Front Turn Signal Monitor Circ
 B2587 Column Lock/Unlock Drive A
 B2588 Column Lock/Unlock Drive A
 B2592 Column Lock/Unlock Drive B
 B2593 Column Lock/Unlock Drive B
 B2597 Traction Control System Switch Circ
 B2605 Seat Front Vert. Pos Sensor Failure
 B2606 Seat Rear Vert. Pos Sensor Failure
 B2607 Seat Horizontal Pos Sensor Failure
 B2721 PASS-Key Detection Circ
 B2722 PASS-Key Detection Circ
 B2723 PASS-Key Detection Circ
 B2735 PASS-Key Programming Mode Active
 B2805 No Transmitters Programmed
 C1214 Sol Valve Relay Contact or Coil Circ Open
 C1217 Pump Motor Relay Contact Circ Open
 C1221 LF Wheel Speed Sensor Input Signal is 0
 C1222 RF Wheel Speed Sensor Input Signal is 0
 C1223 LR Wheel Speed Sensor Input Signal is 0
 C1224 RR Wheel Speed Sensor Input Signal is 0
 C1225 LF Excessive Wheel Speed Variation
 C1226 RF Excessive Wheel Speed Variation
 C1227 LR Excessive Wheel Speed Variation
 C1228 RR Excessive Wheel Speed Variation
 C1232 LF Wheel Speed Circ Open or Shorted
 C1233 RF Wheel Speed Circ Open or Shorted
 C1234 LR Wheel Speed Circ Open or Shorted
 C1235 RR Wheel Speed Circ Open or Shorted
 C1236 Lo System Supply Volt
 C1237 Hi System Supply Volt
 C1241 Magnasteer Malfunction
 C1242 BPMV Pump Motor Grnd Circ Open
 C1243 BPMV Pump Motor Stalled
 C1255 EBTM Internal Malf
 C1256 EBTM Internal Malfunction
 C1261 LF Inlet Valve Sol Malfunction
 C1262 LF Outlet Valve Sol Malfunction
 C1263 RF Inlet Valve Sol Malfunction
 C1264 RF Outlet Valve Sol Malfunction
 C1265 LR Inlet Valve Sol Malfunction
 C1266 LR Outlet Valve Sol Malfunction
 C1267 RR Inlet Valve Sol Malfunction
 C1268 RR Outlet Valve Sol Malfunction
 C1273 TCS Master Cylinder Isolation Valve Malf
 C1274 TCS Prime Valve Malfunction
 C1276 Delivered Torque Signal Circ Malfunction
 C1277 Requested Torque Signal Circ Malfunction
 C1278 TCS Temporarily Inhibited By PCM
 C1281 Steering Sensor Uncorrelated Malfunction
 C1286 Steering Sensor Bias Malfunction
 C1287 Steering Sensor Rate Malfunction
 C1288 Steering Sensor Circ Malfunction
 C1291 Open Brake Lamp Switch Contacts During Decel
 C1293 Code C1291 Set in Previous Ign Cycle
 C1294 Brake Lamp Switch Circ Always Active
 C1295 Brake Lamp Switch Circ Open
 C1650 ESC Module Malfunction
 C1658 EEPROM Calibration Malfunction
 C1710 LF Shock Absorber Sol Circ
 C1711 LF Shock Absorber Sol Circ
 C1712 LF Shock Absorber Sol Circ
 C1715 RF Shock Absorber Sol Circ
 C1716 RF Shock Absorber Sol Circ
 C1717 RF Shock Absorber Sol Circ
 C1720 LR Shock Absorber Sol Circ
 C1721 LR Shock Absorber Sol Circ
 C1722 LR Shock Absorber Sol Circ
 C1725 RR Shock Absorber Sol Circ
 C1726 RR Shock Absorber Sol Circ
 C1727 RR Shock Absorber Sol Circ
 C1743 Loss of Veh Speed Signal
 C1744 Loss of Chassis Pitch Input
 C1760 LF Pos Sensor
 C1761 RF Pos Sensor
 C1762 LR Pos Sensor
 C1763 RR Pos Sensor
 C1768 Pos Sensor Supply Malfunction
 C1780 Loss of Steering Pos Signal
 C1786 RTD Relay Malfunction
 C1787 RTD Relay Circ
 C1788 RTD Relay Circ
 C1790 Ride Control Switch
 C1791 Ride Control Switch
 C2100 Left Front TPM Sensor Malfunction
 C2105 Right Front TPM Sensor Malfunction
 C2110 Right Rear TPM Sensor Malfunction
 C2115 Left Rear TPM Sensor Malfunction
 C2120 TPM System Malfunction
 C2121 TPM System Programming Malfunction
 P0101 Mass Air Flo (MAF) Sensor Perf
 P0102 Mass Air Flo (MAF) Sensor Circ Lo Freq
 P0103 Mass Air Flo (MAF) Sensor Circ Hi Freq
 P0107 Manf Abs Press (MAP) Sensor Circ Lo Volt
 P0108 Manf Abs Press (MAP) Sensor Circ Hi Volt
 P0112 Int Air Tmp (IAT) Sensor Circ Lo Volt
 P0113 Int Air Tmp (IAT) Sensor Circ Hi Volt
 P0117 Eng Cool Tmp (ECT) Sensor Circ Lo Volt
 P0118 Eng Cool Tmp (ECT) Sensor Circ Hi Volt
 P0120 APP Sensor1 Circ
 P0121 Accel Pedal Pos (APP) Sensor 1 Circ Perf
 P0125 Eng Cool Tmp Insuf for Closed Loop
 P0131 HO2S Circ Lo Volt Bank 1 Sensor 1
 P0132 HO2S Circ Hi Volt Bank 1 Sensor 1
 P0133 HO2S SLO Response Bank 1 Sensor 1
 P0134 HO2S Circ Insuf Activity Bank 1 Sensor 1
 P0135 HO2S Heater Perf Bank 1 Sensor 1
 P0137 HO2S Circ Lo Volt Bank 1 Sensor 2
 P0138 HO2S Circ Hi Volt Bank 1 Sensor 2
 P0140 HO2S Circ Insuf Activity Bank 1 Sensor 2
 P0141 HO2S Heater Perf Bank 1 Sensor 2
 P0151 HO2S Circ Lo Volt Bank 2 Sensor 1
 P0152 HO2S Circ Hi Volt Bank 2 Sensor 1
 P0153 HO2S SLO Response Bank 2 Sensor 1
 P0154 HO2S Circ Insuf Activity Bank 2 Sensor 1
 P0155 HO2S Heater Perf Bank 2 Sensor 1
 P0157 HO2S Circ Lo Volt Bank 2 Sensor 2
 P0158 HO2S Circ Hi Volt Bank 2 Sensor 2
 P0160 HO2S Circ Insuf Activity Bank 2 Sensor 2
 P0161 HO2S Heater Perf Bank 2 Sensor 2
 P0171 Fuel Trim System Lean Bank 1
 P0172 Fuel Trim System Rich Bank 1
 P0174 Fuel Trim System Lean Bank 2
 P0175 Fuel Trim System Rich Bank 2
 P0218 Trans Fluid OverTmp
 P0220 Accel Pedal Pos (APP) Sensor 2 Circ
 P0221 Accel Pedal Pos (APP) Sensor 2 Circ Perf
 P0225 Accel Pedal Pos (APP) Sensor 3 Circ
 P0226 Accel Pedal Pos (APP) Sensor 3 Circ Perf
 P0230 Fuel Pump Relay Control Circ
 P0300 Eng Misfire Det
 P0325 Knock Sensor Module Perf
 P0327 Knock Sensor (KS) 1 Circ
 P0332 Knock Sensor (KS) 2 Circ
 P0335 Crankshaft Pos (CKP) Sensor Circ
 P0336 Crankshaft Pos (CKP) Sensor Perf
 P0341 Cam Pos (CMP) Sensor Perf
 P0342 Cam Pos (CMP) Sensor Circ Lo Volt
 P0343 Cam Pos (CMP) Sensor Circ Hi Volt
 P0351 Ign Coil 1 Control Circ
 P0352 Ign Coil 2 Control Circ
 P0353 Ign Coil 3 Control Circ
 P0354 Ign Coil 4 Control Circ
 P0355 Ign Coil 5 Control Circ
 P0356 Ign Coil 6 Control Circ
 P0357 Ign Coil 7 Control Circ
 P0358 Ign Coil 8 Control Circ
 P0410 Sec Air Injection (AIR) System
 P0412 Sec Air Injection (AIR) Sol Relay Control Circ
 P0418 Sec Air Injection (AIR) Pump Relay Control Circ
 P0420 Catalyst System Lo Efficiency Bank 1
 P0430 Catalyst System Lo Efficiency Bank 2
 P0441 Evap Emis (EVAP) System No Flo During Purge
 P0443 Evap Emis (EVAP) Purge Sol Control Circ
 P0461 Fuel Level Sensor Perf
 P0462 Fuel Level Sensor Circ Lo Volt
 P0463 Fuel Level Sensor Circ Hi Volt
 P0480 Cooling Fan Relay 1 Control Circ
 P0481 Cooling Fan Relay 2 and 3 Control Circ
 P0500 Veh Speed Sensor (VSS) Circ
 P0502 Veh Speed Sensor (VSS) Sensor Circ Lo Input
 P0503 Veh Speed Sensor (VSS) Sensor Interm
 P0506 Idle Speed Lo
 P0507 Idle Speed Hi
 P0530 Air Cond (A/C) Refrigerant Press Sensor Circ
 P0562 System Volt Lo
 P0563 System Volt Hi
 P0567 Cruise Control Resume Switch Circ
 P0568 Cruise Control Set Switch Circ

P0571 Cruise Control Brake Switch Circ
P0601 Control Module Read Only Memory (ROM)
P0602 Control Module Not Programmed
P0606 Control Module Internal Perf
P0608 Veh Speed Output Circ
P0650 Malfunction Indicator Lamp (MIL) Control Circ
P0654 Eng Speed Output Circ
P0704 Clutch Switch Circ
P0705 Trans Range Switch Circ
P0706 Trans Range Switch Perf
P0711 TFT Sensor Circ Range/Perf
P0712 Trans Fluid Tmp (TFT) Sensor Circ Lo Input
P0713 Trans Fluid Tmp (TFT) Sensor Circ Hi Input
P0719 Brake Switch Circ Lo Input
P0724 Brake Switch Circ Hi Input
P0740 TCC Enable Sol Circ Electrical
P0742 TCC System Stuck On
P0748 Press Control Sol Circ Electrical
P0751 1-2 Shift Sol Valve Perf
P0753 1-2 Shift Sol Circ Electrical
P0756 2-3 Shift Sol Valve Perf
P0758 2-3 Shift Sol Circ Electrical
P0785 3-2 Shift Sol Circ Electrical
P0801 Reverse Inhibit Sol Control Circ
P0803 Skip Shift Sol Control Circ
P0804 Skip Shift Lamp Control Circ
P1111 Int Air Tmp (IAT) Sensor Circ Intern Hi Volt
P1112 Int Air Tmp (IAT) Sensor Circ Intern Lo Volt
P1114 Eng Cool Tmp (ECT) Sensor Circ Intern Lo Volt
P1115 Eng Cool Tmp (ECT) Sensor Circ Intern Hi Volt
P1120 Throt Pos (TP) Sensor 1 Circ
P1125 Accel Pedal Pos (APP) System
P1133 HO2S Insuf Switching Bank 1 Sensor 1
P1134 HO2S Transition Time Ratio Bank 1 Sensor 1
P1153 HO2S Insuf Switching Bank 2 Sensor 1
P1154 HO2S Transition Time Ratio Bank 2 Sensor 1
P1187 Eng Oil Press (EOP) Sensor Circ Lo Volt
P1188 Eng Oil Press (EOP) Sensor Circ Hi Volt
P1220 Throt Pos (TP) Sensor 2 Circ
P1221 Throt Pos (TP) Sensor 1- 2 Correlation
P1258 Eng Cool OverTmp - Protection Mode Active
P1380 Misfire Det - Rough Road Data Not Available
P1381 Misfire Det - No Comm with Brake Control Module
P1415 Sec Air Injection (AIR) System Bank 1
P1416 Sec Air Injection (AIR) System Bank 2
P1431 Fuel Level Sensor 2 Perf
P1432 Fuel Level Sensor 2 Circ Lo Volt
P1433 Fuel Level Sensor 2 Circ Hi Volt
P1441 Evap Emis (EVAP) System FLo During Non-Purge
P1514 Throt Body Perf
P1515 Control Module Throt Act Pos Perf
P1516 Throt Act Control (TAC) Module Throt Act Pos Perf
P1517 Throt Act Control (TAC) Module Perf
P1518 Throt Act Control (TAC) Module Serial Data Circ
P1539 Air Cond (A/C) Clutch Feedback Circ Hi Volt
P1545 Air Cond (A/C) Clutch Relay Control Circ
P1546 Air Cond (A/C) Clutch Feedback Circ Lo Volt
P1571 Traction Control Torque Request Circ
P1574 Stoplamp Switch Circ
P1575 Extended Travel Brake Switch Circ
P1624 PCM RAM Perf
P1626 Theft Deterrent Fuel Enable Signal Lost
P1630 Theft Deterrent Learn Mode Active
P1631 Theft Deterrent Start Enable Signal Not Correct
P1635 5 Volt Reference 1 Circ

P1639 5 Volt Reference 2 Circ
P1644 Traction Control Delivered Torque Output Circ
P1652 Powertrain Induced Chassis Pitch Output Circ
P1810 TFP Valve Pos Switch Circ
P1860 TCC PWM Sol Circ Electrical
P1870 Trans Component Slipping
Table
U1000 Class 2 Comm Malfunction
U1016 Loss of Comms with PCM
U1016 Loss of Comms with PCM
U1016 Loss of Comms with PCM
U1016 Loss of Comms with PCM
U1040 Loss of Comms with TCS
U1056 Loss of Comms with RTD
U1064 Lost Comms with BCM
U1064 Lost Comms with BCM
U1096 Loss of Comms with IPC
U1096 Loss of Comms with IPC
U1128 Loss of Comms with RADIO
U1153 Loss of Comms with HVAC
U1160 Loss of Comms with LDCM
U1161 Loss of Comms with RDCM
U1166 Loss of Comms with SCM
U1176 Loss of Comms with RFA
U1255 Generic Loss of Comms

U1255 Serial Data Line Malfunction
U1255 Serial Data Line Malfunction
U1255 Serial Data Line Malfunction
Latched B1018, B1024 Notice (SDM-RSD)

<http://www.davidfarmerstuff.com/>

Please support my site via the paypal link on my homepage